
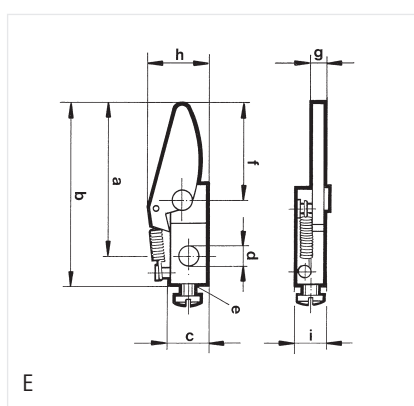
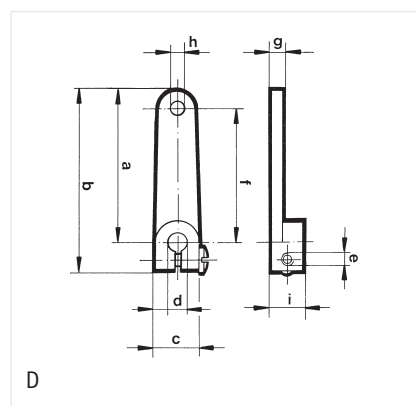
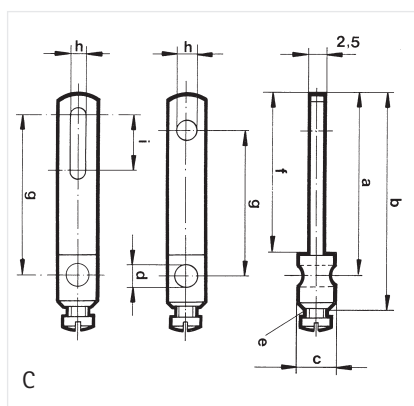
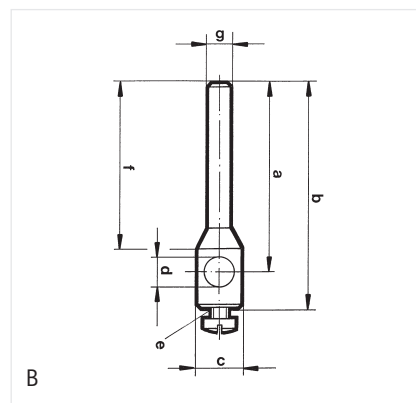


Stroke Levers

OVERVIEW

This overview shows different kinds of levers available. The stroke levers are not supplied with the counters and must be ordered separately.

A "standard lever" is stated with the order information for mechanical stroke counters.

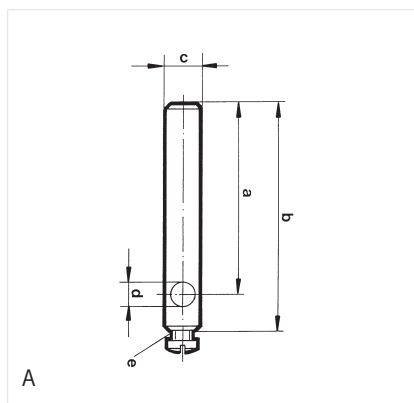

Stroke Levers

DIMENSION TABLE

ORDER INFORMATION

Spark Quenching

RC UNIT

For contactors, solenoids etc.

VARISTOR

For small relays

ORDER INFORMATION

Technical data

Ordering code	a	b	c	d	e	f	g	h	i
0 600 003	34	40.5	∅ 8	∅ 5	M 3	29.5	∅ 4	--	--
0 600 005	45	55	∅ 10	∅ 7	M 4	41	∅ 5	--	--
0 600 007	26	31.5	∅ 7	∅ 3	M 2.6	21.2	--	--	--
0 600 009	22	28	∅ 7	∅ 4	M 4	18	18	3	11
0 600 010	28.7	33.7	8	∅ 3	M 2.6	25.4	1.8	2.5	5.5
0 600 012	28.2	33.5	7	∅ 3	M 2.6	17.8	2	10.7	5
0 600 013	28.2	33.5	7	∅ 4	M 4	17.8	2	10.7	5
0 600 026	35.5	41.5	∅ 7	∅ 4	M 4	31.5	∅ 3.5	--	--
0 600 047	27.5	35	7	∅ 4	M 3	24	2.5	2	6
0 600 061	22	28	∅ 7	∅ 4	M 4	18	15	3	--
0 600 090	33	39.5	∅ 8	∅ 5.5	M 4	28.5	∅ 4	--	--
0 600 126	35	41.5	∅ 6	∅ 4	M 4	--	--	--	--

Bore ∅ mm	A	B	Shape C	D	E
3	--	--	0 600 007	0 600 010	0 600 012
4	0 600 126	0 600 026	0 600 009*	0 600 047*	0 600 013
4	--	--	0 600 061*	--	--
5	--	0 600 003	--	--	--
5.5	--	0 600 090	--	--	--
7	--	0 600 005	--	--	--

* on request



Inquire for other stroke levers

Loads operated directly by the counter, such as contactors, solenoids etc., produce a very high inductive voltage when they are switched off.

This leads to sparking at the switch contacts and causes contact burning, thus reducing the lifetime or the inte-

grated relay. Voltage peaks may also cause interfering pulses.

Therefore we recommend to adopt one of the following spark quenching measures for inductive loads.

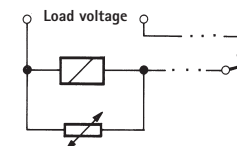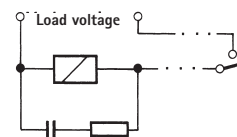

RC unit	Ordering code 3 536 801
Varistor	Ordering code 3 540 777